



Chroma Acoustical Panel Cleaning Instructions

Natural facing (unpainted):

Chroma's natural facing (unpainted) can only be cleaned with a dry brush or cloth. Contact with water will cause damage to the facing.

Painted facing:

The painted surface of a Chroma's panel should only be cleaned with water, a soft, non-abrasive cloth and gentle pressure. Strong rubbing, the use of abrasive agents or materials can/will cause damage to the painted surface.

If the painted surface cannot be successfully cleaned, another extremely light coat of paint may be applied by using a paint sprayer to cover imperfections. Paint rollers should not be used for touching up, they will apply too much paint and impede the acoustical performance of the panels.

Please be advised that paint changes color and tone over time, so any touch ups or recoats may lead to a shade variance on the touched-up area of the panel or between panels (if multiple panels are present).

