





1. Check the existing pipe location and measure the required length needed to hang the panel.
(Consult installer or architect for proper measurement.)

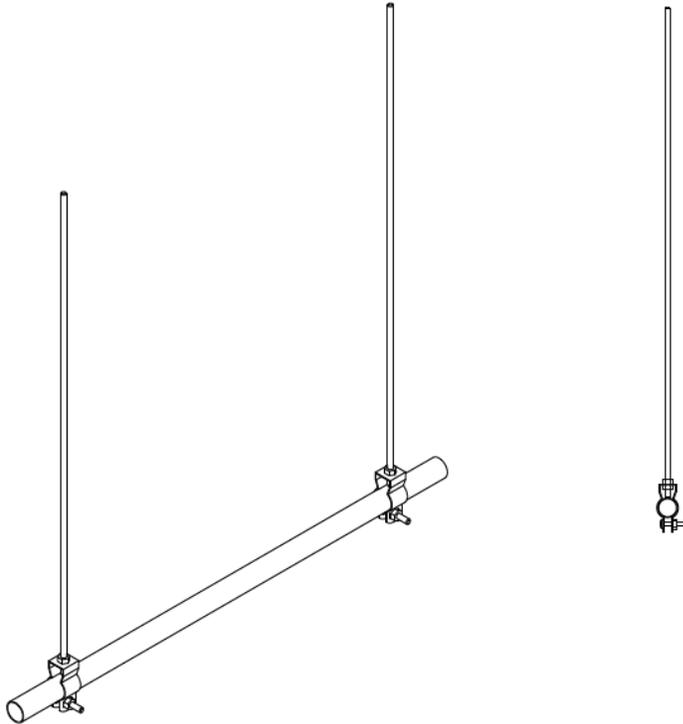




2. Make 1/4" drill for threaded rod assembly.

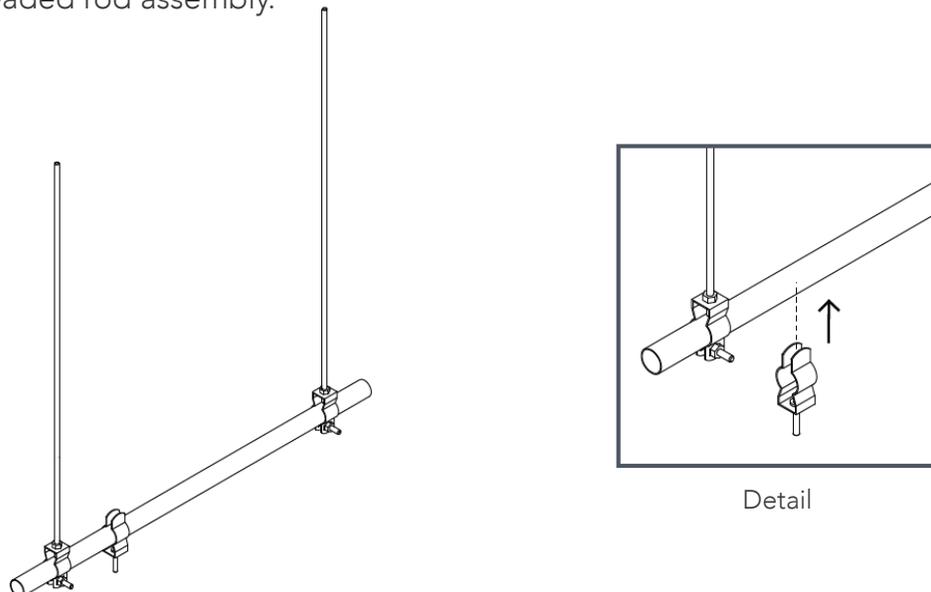

3. Insert the coupling nut to the conduit clip bolt.

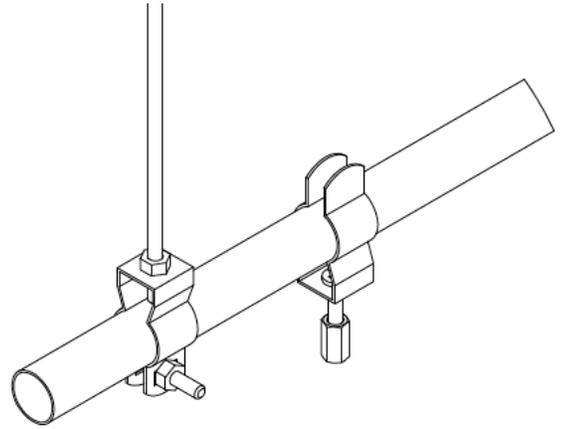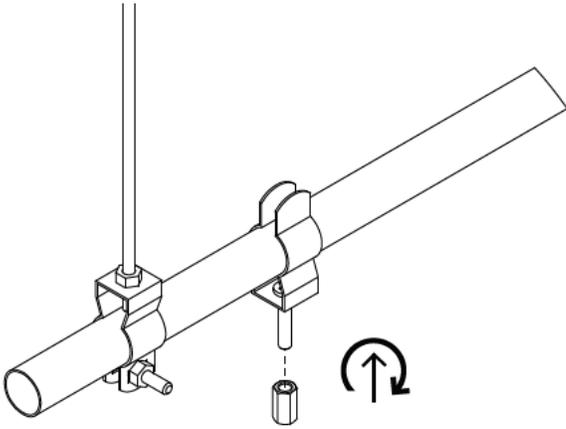

4. Insert the threaded rod to the coupling nut.

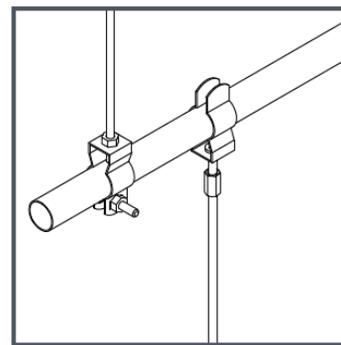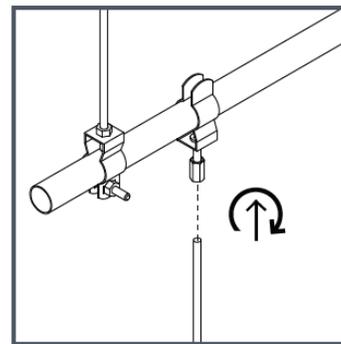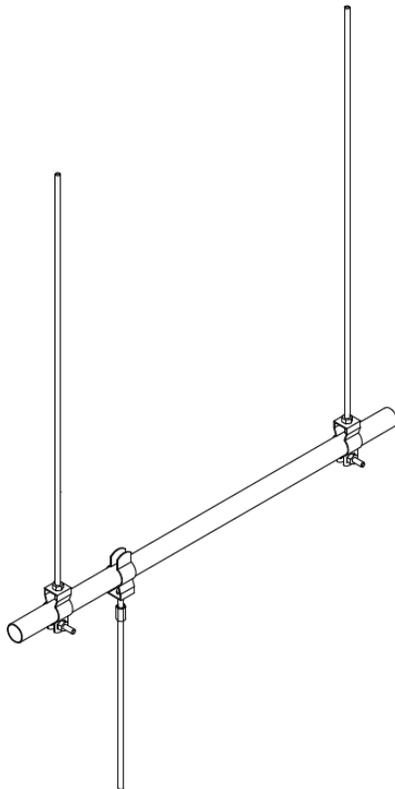

5.. Insert the threaded rod to the pre-drilled location of side panel assembly extrusion.

