POLY-COUSTIX®
BY SOUND SEAL

PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
Installation Overview

These installation suggestions consist of a common process for box baffle installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

Tools Needed




Drill




Cable Cutter & Crimper


Items Included

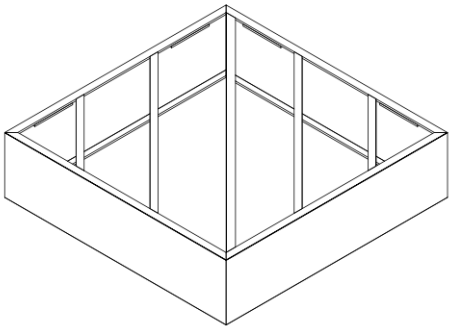

Oblix Baffle




Hanger Bolt



Coupling Nut



Aircraft Cable



Hanger Bolt Driver
(Ivy Classic)



Soldering Iron



Cable Ferrule



White Nylon
Ratcheting Rivet



Glue gun with
glue sticks


POLY-COUSTIX®
BY SOUND SEAL

PET | POLYESTER ACOUSTICAL PRODUCTS


OBLIX™

(Drywall/Concrete) Installation Overview

1. Check the total quantity of the Oblix baffle before assembly. Find the numbering sticker attach with the baffle as A, B

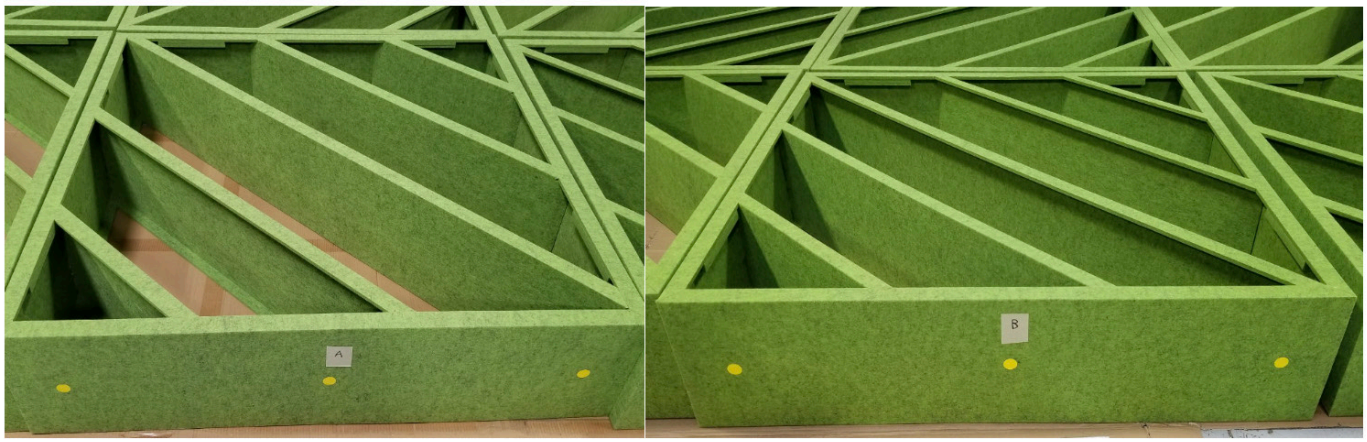


2. Arrange the baffles according to the design on the floor

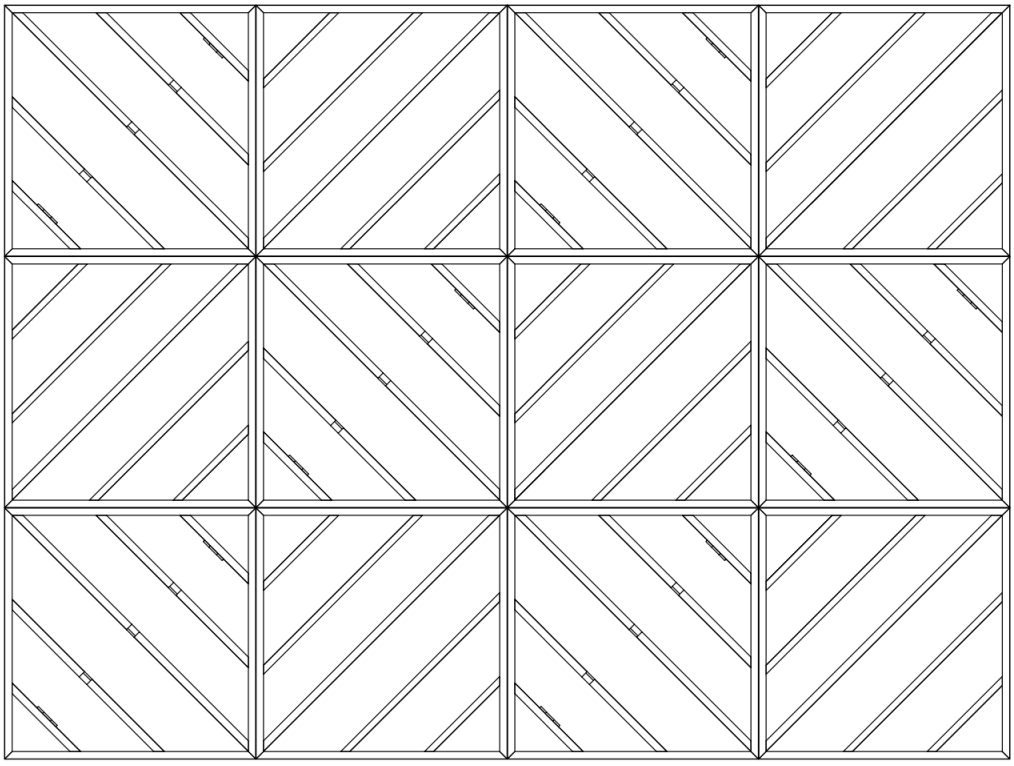


POLY-COUSTIX®
BY SOUND SEAL

PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
(Drywall/Concrete) Installation Overview

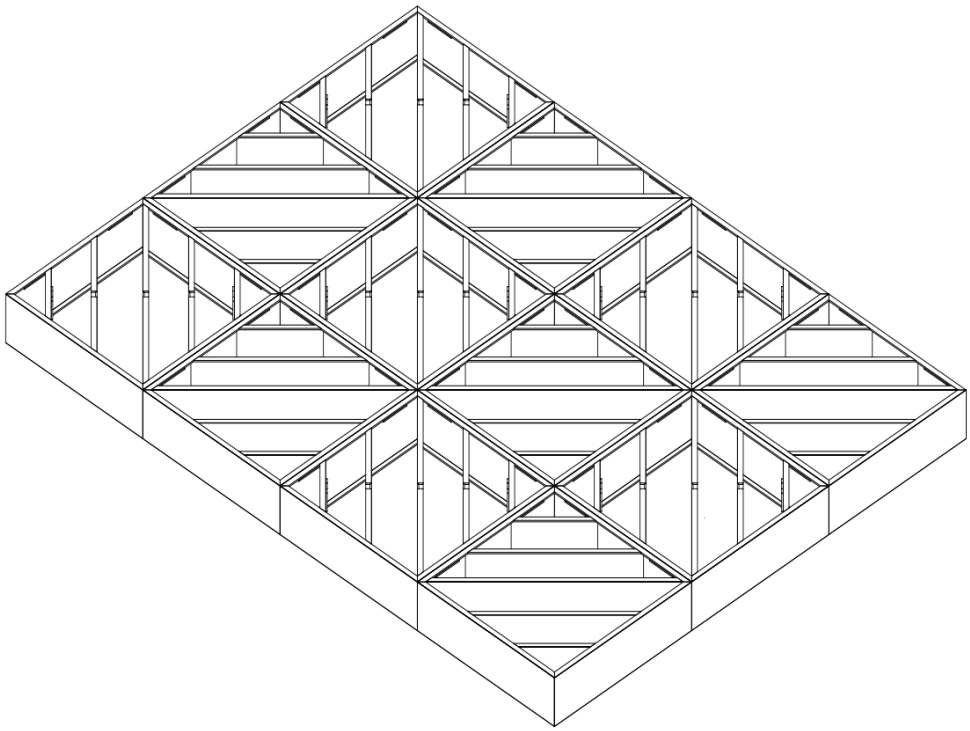


3. Check the double layer strip on the baffle which will always face the ceiling.

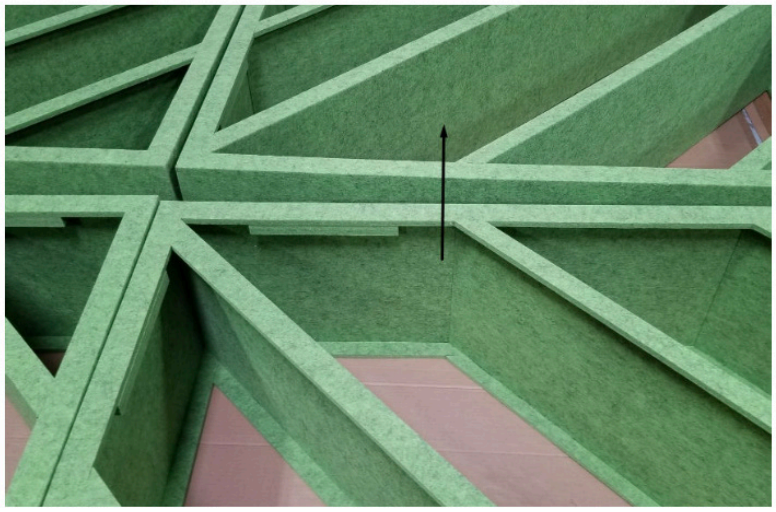


PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
(Drywall/Concrete) Installation Overview


4. Find the desired location for the aircraft cable on the baffle. Use the soldering iron to make holes on the baffle. Always make hole on the two layer strip location.

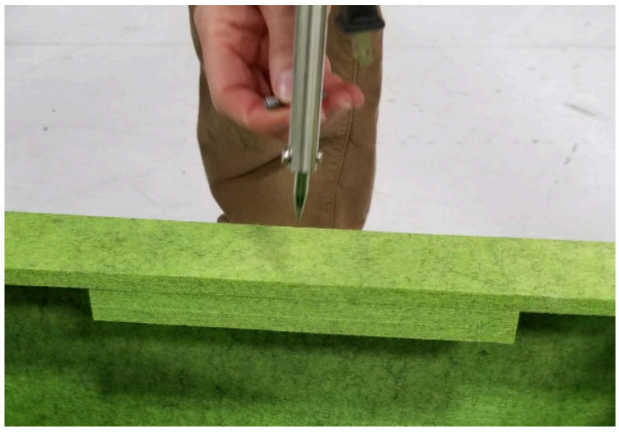

5. Make hole depth 18 mm – 20 mm. Do not pass through the third layer of PET.

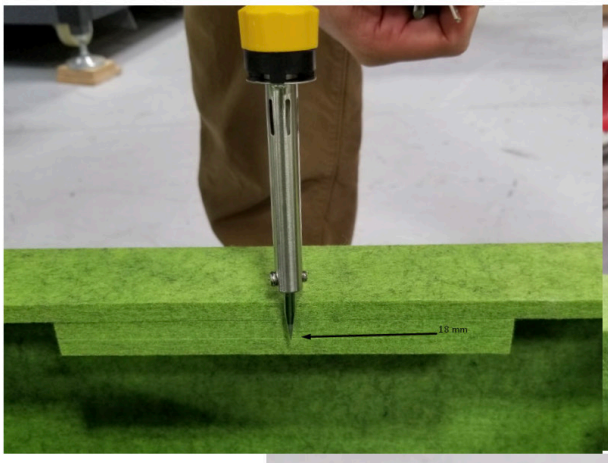




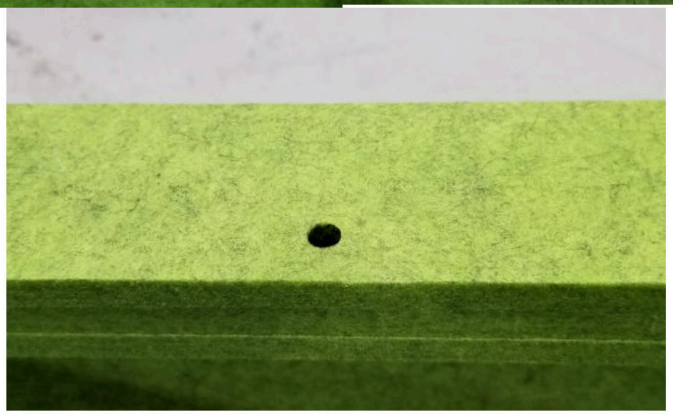

PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
(Drywall/Concrete) Installation Overview


6. Use the glue gun to fill the hole

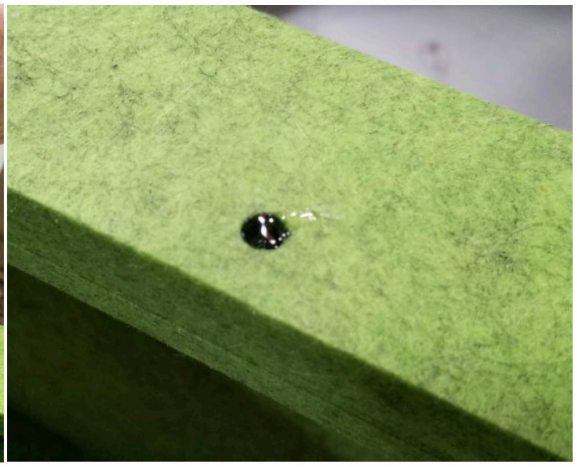7. Attach the given hanger bolt driver on the drill. Insert the hanger bolt on the hanger bolt driver.




8. Drive the hanger bolt through the hole until it reaches half way

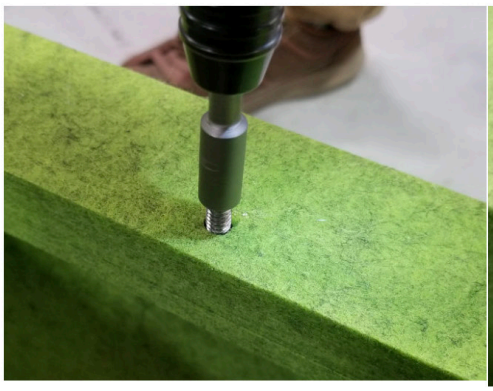



OBLIX™


(Drywall/Concrete) Installation Overview

9. Insert the aircraft cable through cable ferrule and grip lock. Screw the grip lock head.




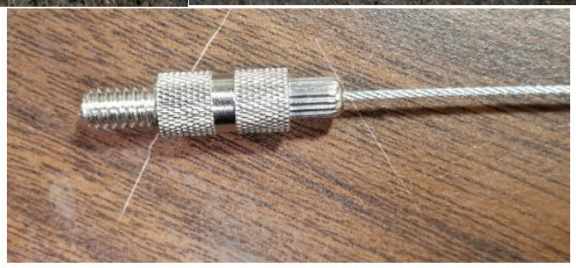

10. Screw the coupling nut on the grip lock.

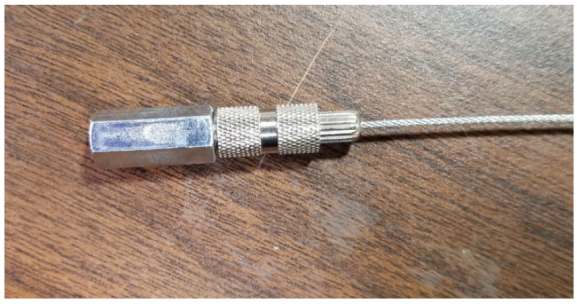

11. To make loop on the other side o the aircraft cable, pass the cable through the cable ferrule and crimp it.

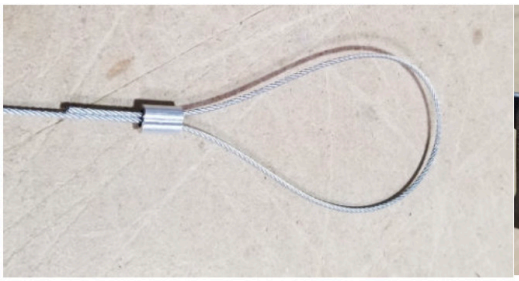




PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
(Drywall/Concrete) Installation Overview

12. Screw the coupling nut into the hanger bolt of the baffle.



13. To attach two baffles together, find the yellow label on the baffle. Take the yellow label from both baffles and push out the material from square hole.

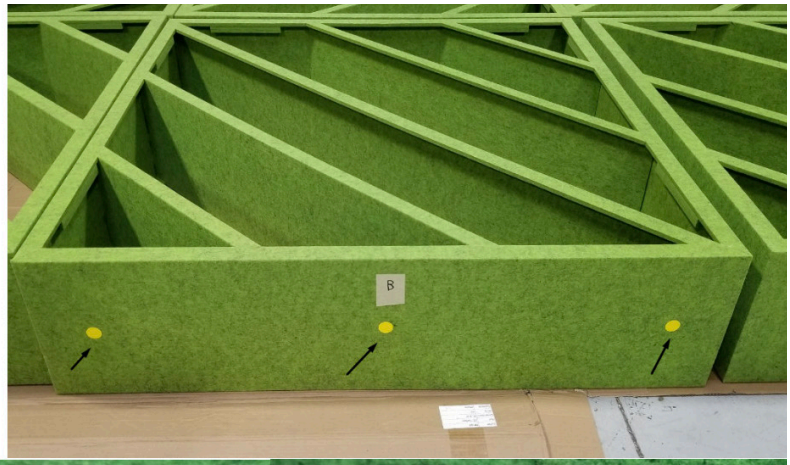


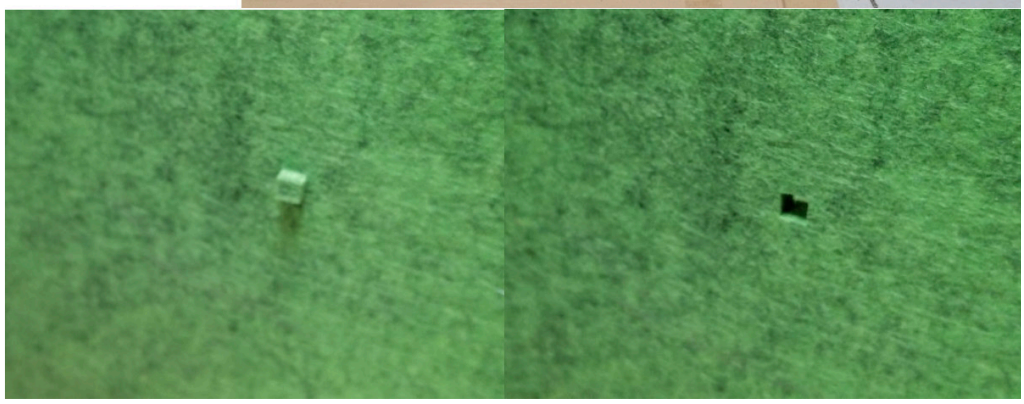

OBLIX™

(Drywall/Concrete) Installation Overview

14. Take a pair of ratchet rivet and align the threaded rib perpendicular to each other before inserting it in the hole.

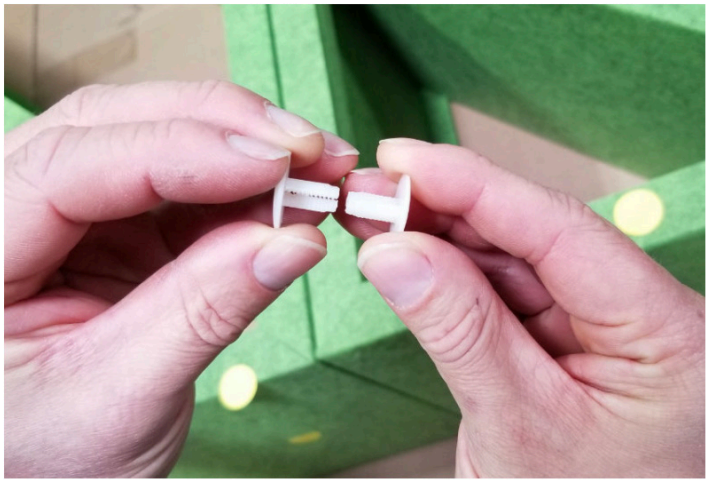

15. Use both hands to insert two pieces together and push it tightly.





PET | POLYESTER ACOUSTICAL PRODUCTS
OBLIX™
(Drywall/Concrete) Installation Overview

16. Finish the installation

