POLY-COUSTIX®
BY SOUND SEAL

PET | POLYESTER ACOUSTICAL PRODUCTS

# VERTEX BAFFLE®

## (Drywall/Concrete) Installation Overview

AIRCRAFT CABLE

These installation suggestions consist of a common process for baffle installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful install.

---

### TOOLS NEEDED



Cable Cutter

### OPTIONAL




1/16" Aircraft Cable
(3' per baffle included)

Additional length required, if any,
will be determined by site needs


Note: Installer to select preferred ceiling hardware.

---


### ITEMS INCLUDED

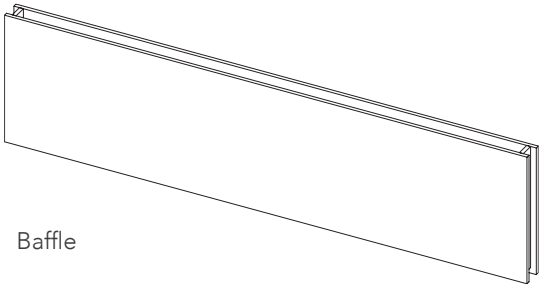

Baffle

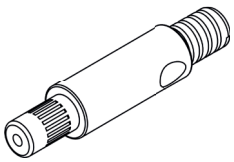

(2) Grip Lock-Lock

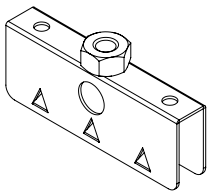

(2) 9mm Spike Bracket

POLY-COUSTIX®
BY SOUND SEAL


PET | POLYESTER ACOUSTICAL PRODUCTS

# VERTEX BAFFLE®


## (Drywall/Concrete) Installation Overview

AIRCRAFT CABLE

**1.** Locate where spike bracket should be placed; we recommend approximately 6" from each side of the baffle. Slide spike brackets from the top in between layers until they grip the center layer of material.

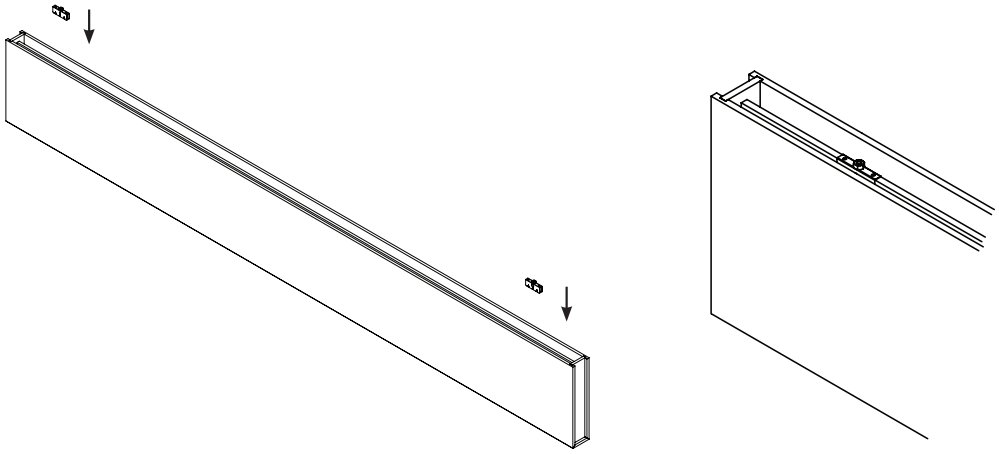

**2.** Insert and lock the aircraft cable into the grip lock.

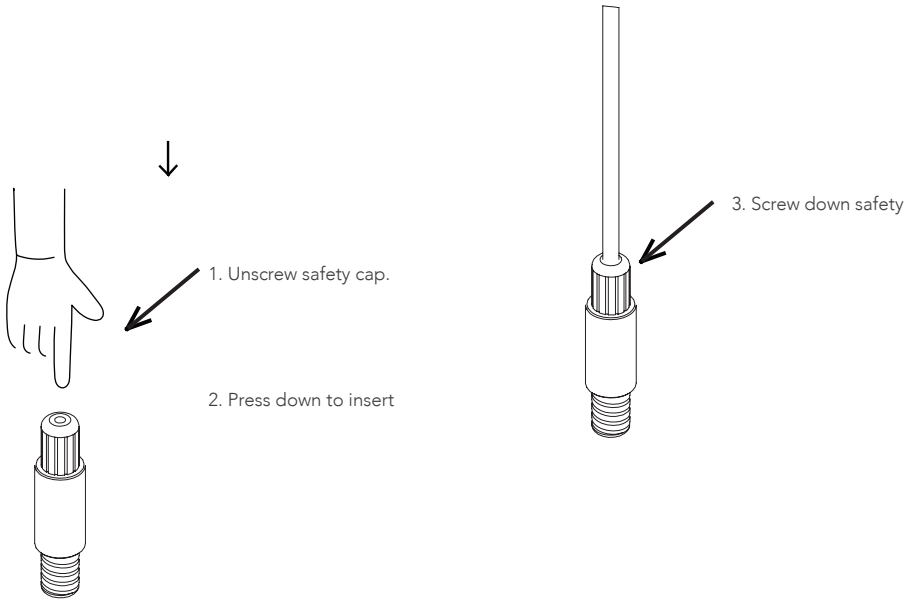


PET | POLYESTER ACOUSTICAL PRODUCTS

# VERTEX BAFFLE®


## (Drywall/Concrete) Installation Overview

AIRCRAFT CABLE

**3.** Screw the grip-lock to the bracket on the baffle.

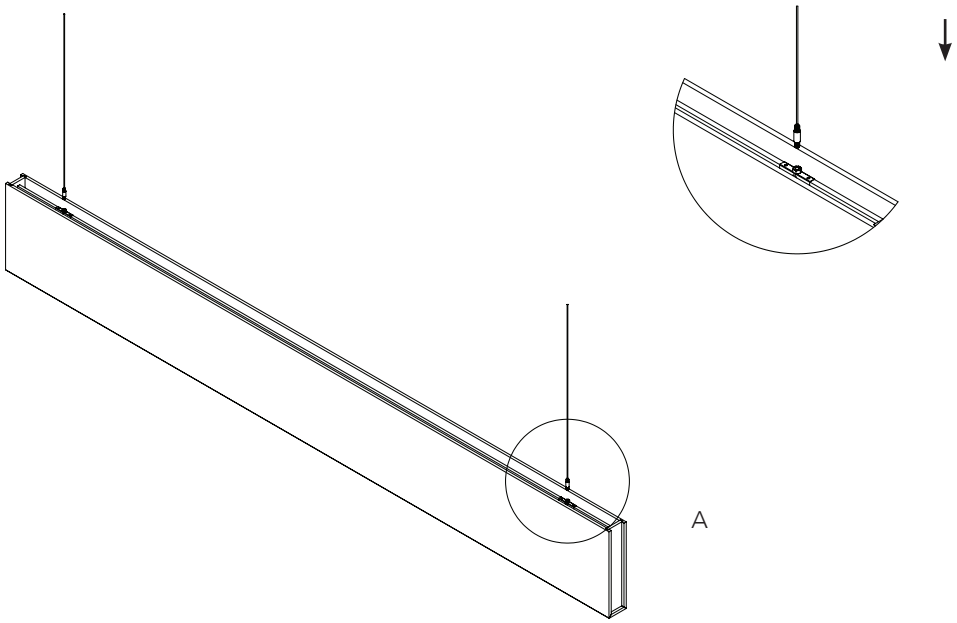


**4.** Complete installation.

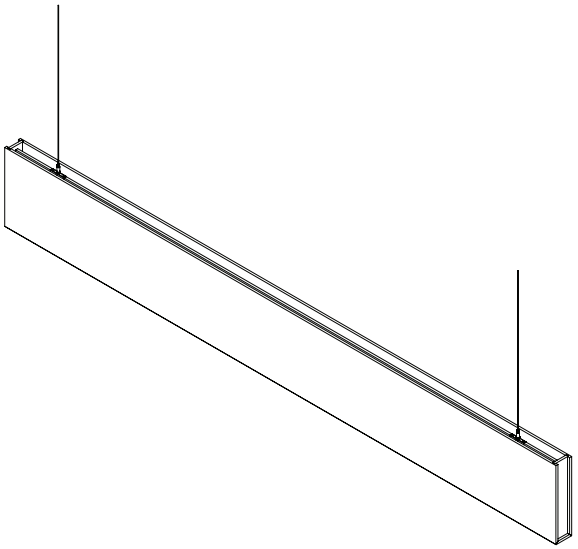

POLY-COUSTIX®
BY SOUND SEAL

# PET | POLYESTER ACOUSTICAL PRODUCTS
# VERTEX BAFFLE®
## (Drywall/Concrete) Installation Overview

THREADED ROD

These installation guidelines consist of the common process of adding a 1/4" (20) threaded stud for baffle installation. Installers should rely upon their own professional experience and understanding of their unique requirements to ensure a successful installation.

---

### TOOLS NEEDED



Cable Cutter


### BY OTHERS




Threaded Rod 1/4-20

---

### ITEMS INCLUDED

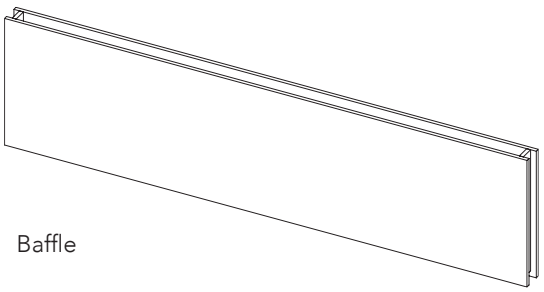

Baffle

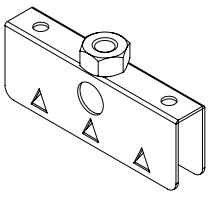

(2) 9mm Spike Bracket

POLY-COUSTIX®
BY SOUND SEAL


PET | POLYESTER ACOUSTICAL PRODUCTS

# VERTEX BAFFLE®

## (Drywall/Concrete) Installation Overview

THREADED ROD

**1.** Locate where spike bracket should be placed; we recommend approximately 6" from each side of the baffle. Slide spike brackets from the top in between layers until they grip the center layer of material.

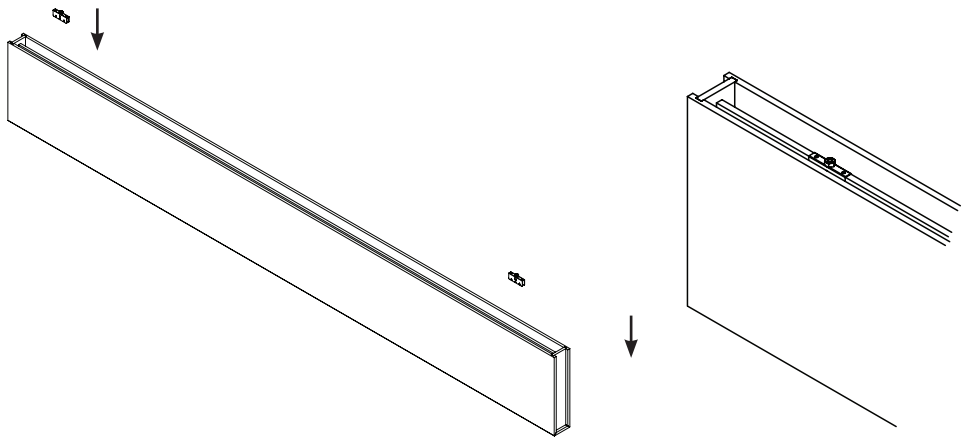

**2.** Install the threaded rod into the spike bracket.

