




1. LAY OUT THE PANEL LOCATION.

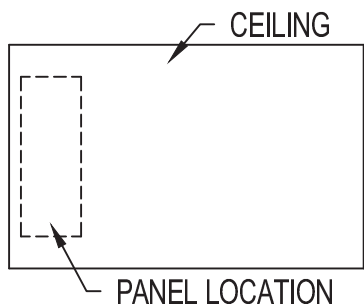


2. DETERMINE EC-2 BRACKET / EC-4 BAR LOCATIONS ON WALL TO LINE UP WITH EC-1 BRACKET LOCATIONS ON PANELS.

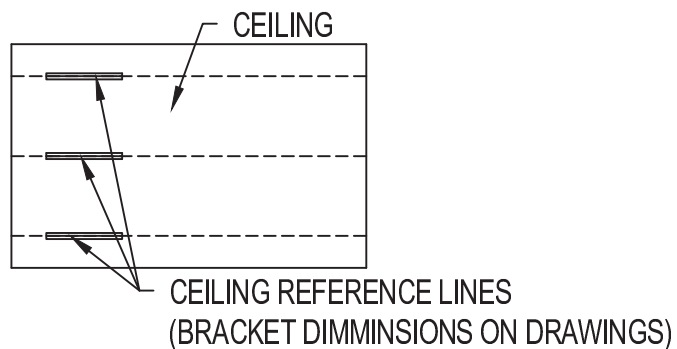

3. SECURE THE EC-2 BRACKET / EC-4 BAR TO THE CEILING WITH SCREWS.

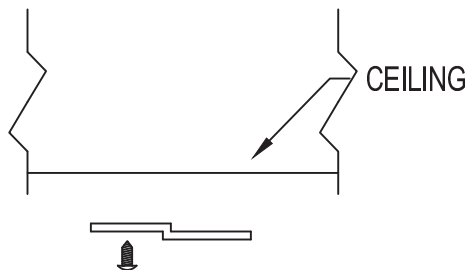

4. SLIDE THE EC-1 BRACKETS ON THE PANELS ONTO THE EC-2 / EC-4 BARS ON THE CEILING.

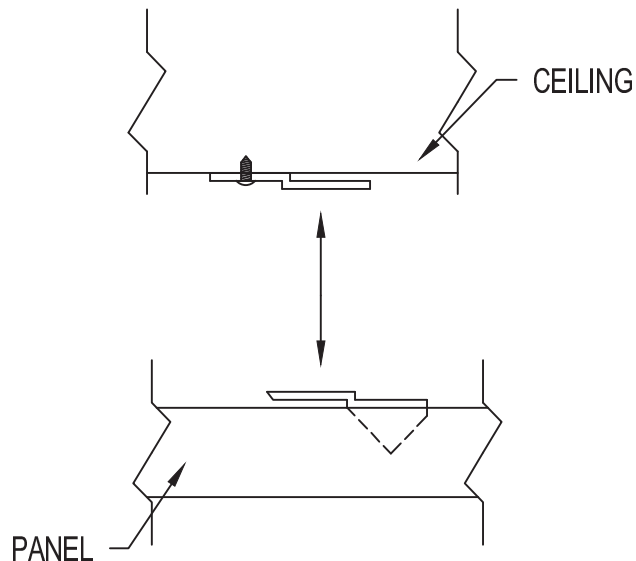

\*APPLY A SMALL AMOUNT OF ADHESIVE ON BOTH PARTS OF THE BRACKETS. THEN SLIDE BRACKET TOGETHER

**SOUND SEAL®**  
50 H.P. ALMGREN DRIVE AGAWAM, MA 01001  
WWW.SOUNDSEAL.COM (413) 789-1770



**EC-CLIP**  
**CEILING MOUNT**