




1. LAY OUT THE PANEL LOCATION(S) ON THE WALL.

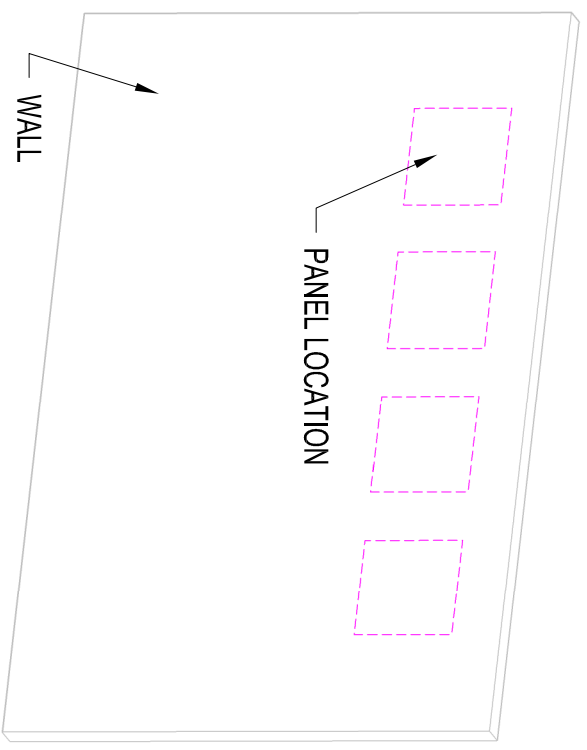


2. DETERMINE EC-2 / EC-4 BRACKET LOCATIONS ON WALL, BRACKETS SHOULD LINE UP WITH EC-1 CLIPS ON SUPPLIED PANELS.

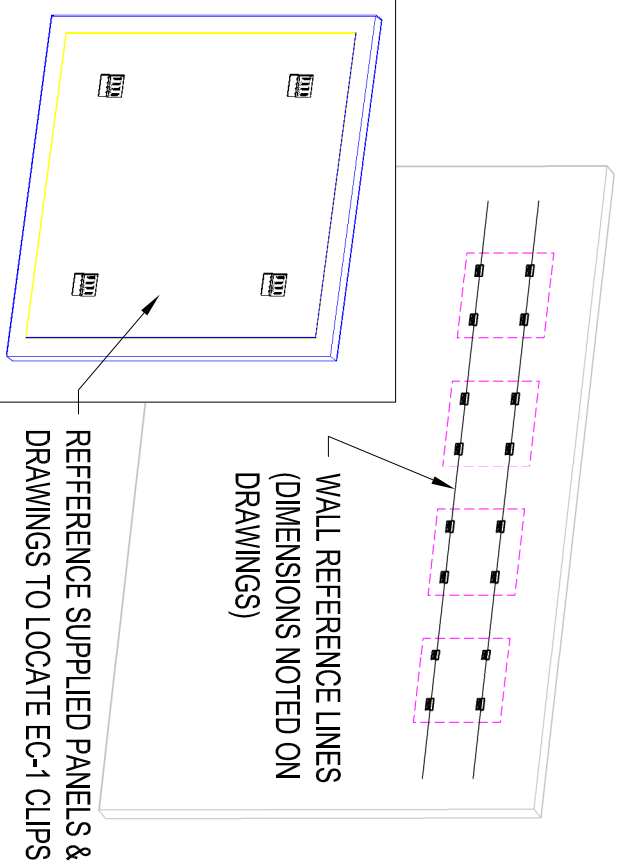

3. SECURE THE EC-2 / EC-4 BRACKETS TO THE WALL WITH SCREWS.

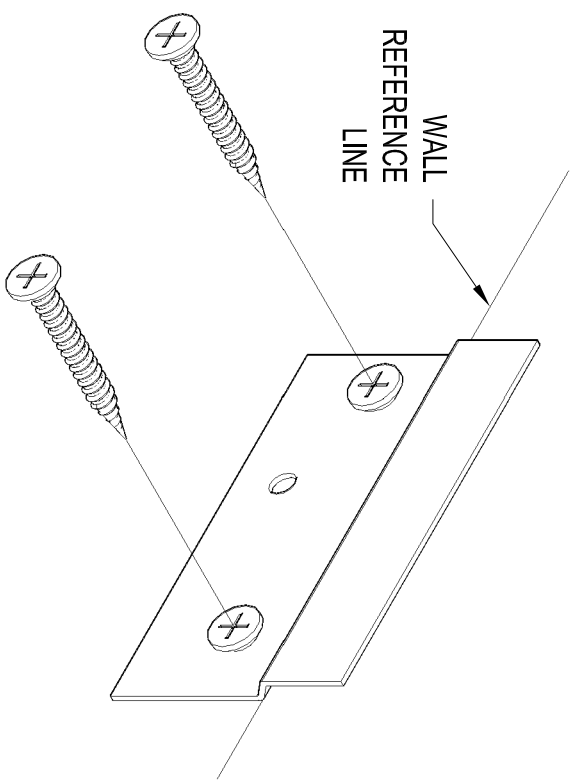

4. SLIDE THE EC-1 CLIPS ATTACHED TO THE PANEL ONTO THE EC-2 / EC-4 BRACKETS ON THE WALL.

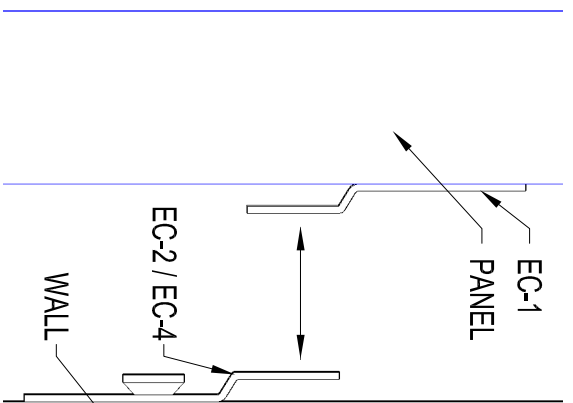

*FOR ALL CEILINGS, A SMALL AMOUNT OF ADHESIVE SHOULD BE APPLIED TO BOTH PARTS OF THE BRACKETS BEFORE BEING SLID TOGETHER.

REV	DRAWN BY	DATE

EC-CLIP MOUNTING DETAIL

SCALE:	NTS
JOB NUMBER:	-
SHEET:	01
DRAWN BY:	JP
DATE:	09-08-14