WoodTrends Topline Installation Guidelines for Ceilings

STOP PLEASE READ THIS FIRST

1. Determine the desired direction of the panels and the panels layout.

2. Install furring strips according to architect's specifications. Furring strips will always be perpendicular to the panel length (see detail C). Furring strips are to be installed 2'-0" on center (max).

3. Check ceiling for any layout difficulties, i.e. HVAC, sprinkler heads, lights, etc. Adjust layout to maximize panel width for starting and ending rows.

4. Install the first row of panels with construction adhesive & pin nails. Install field rows with construction adhesive & nail clips. Install last row with construction adhesive and pin nails. (see details F)

5. Field cut any panels that need to be adjusted for length or width. Use a quality power saw with a thin kerfed blade with 60 teeth or better. (see detail D, F & G)


6. Where 2 panels butt together, use 1 clip to span both panels. If panels do not line up on a piece of furring, add furring as needed. (see detail C & H)

7. After installation is complete, wipe down panels with a dust free dusting cloth sprayed with a non abrasive household dusting agent.


8. For cleaning, maintenance or removing fingerprints, wipe panels with lemon oil and buff out by hand with a soft dust free cloth.

SOUND SEAL ™
50 H.P. ALMGREN DRIVE
P.O. BOX 545
AGAWAM, MA 01001


DETAIL A

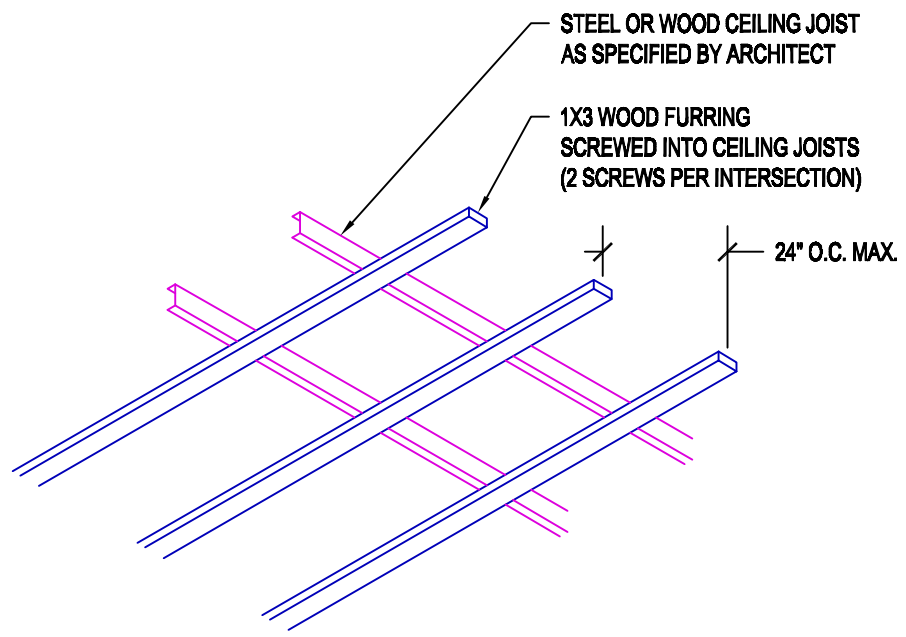

DETAIL B

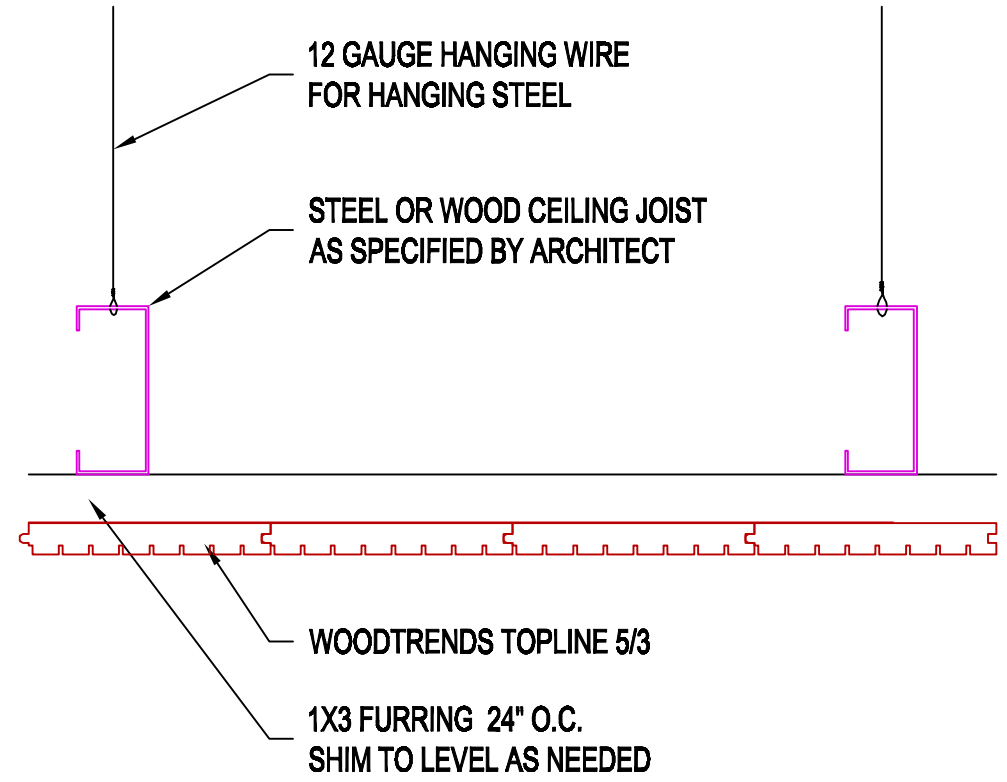

DETAIL C

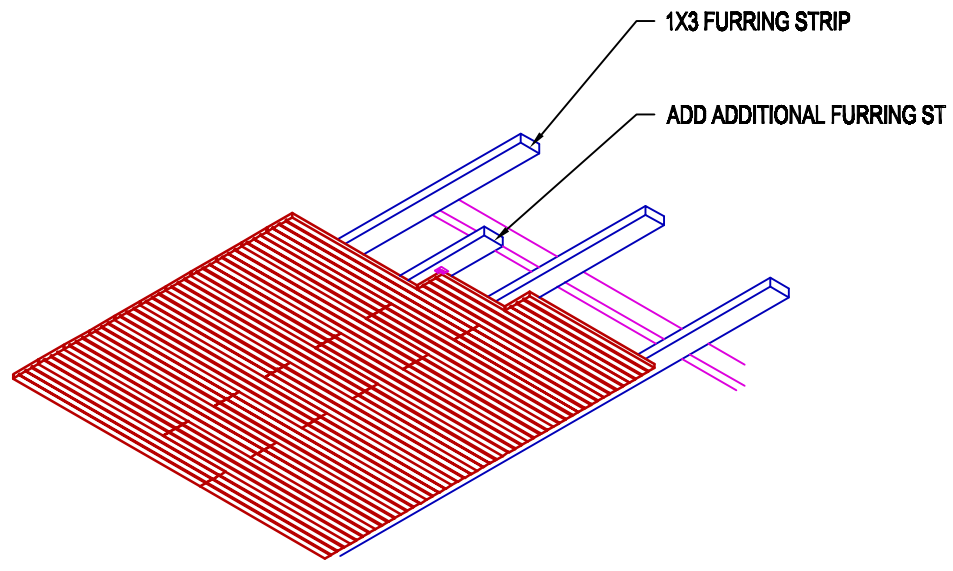

DETAIL D

